



Zaptec Go / Zaptec Pro

Power management for your EV charger

Integration guide - Zaptec

TABLE OF CONTENTS



English

1



Svenska

2



English

**Before you start:**

A Monitor must be installed and configured to measure total consumption.




The Zaptec charging box must be commissioned and linked to an installation on a user account with Zaptec.


Follow these steps to integrate with Zaptec:**1**

In the Enegic app, go to **Settings, Licenses**.


Scan the QR code on the included integration license.

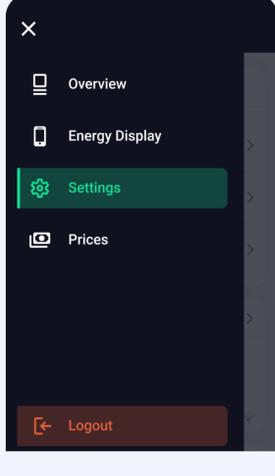2

Go to **Settings, Reporters** and **Add new Reporter**.

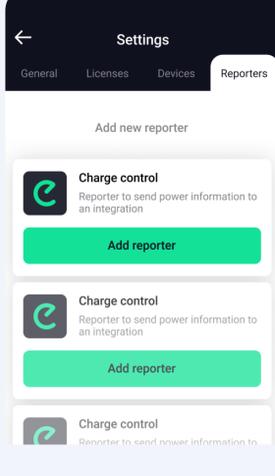3


Select **Zaptec** as the type of reporter from the list.

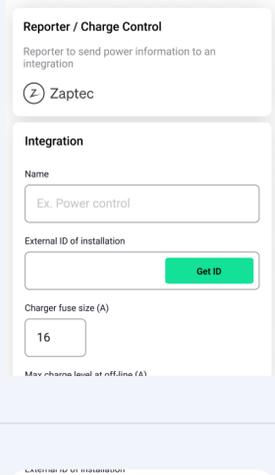4

Enter an appropriate name..


Press “Get ID” to link the Zaptec installation to the Reporter.

If you are unable to link the installation, see step 9.

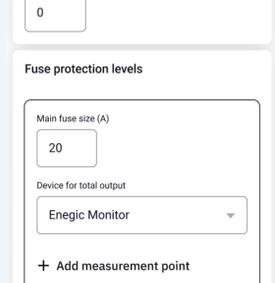
5

Enter charger fuse size.

Enter a safe charge level if the Enegic Monitor goes offline.

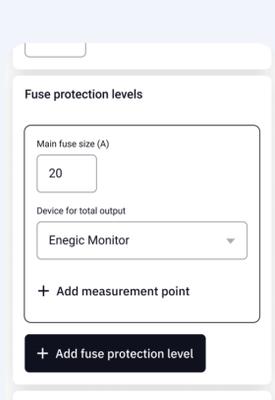6


Enter main fuse size.

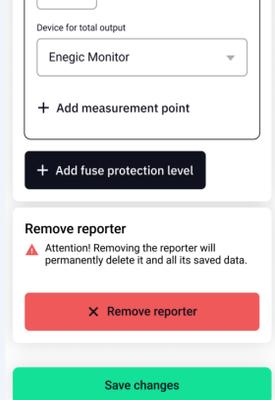7

Ensure the correct Enegic monitor is selected as total consumption measurement.

Then press **Save**.

The reporter is now configured.

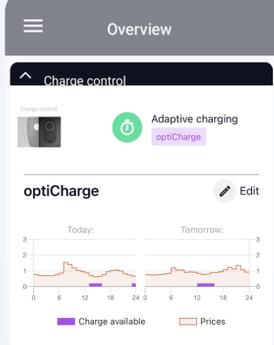8**Enegic Monitor is now integrated with Zaptec**

The charging box(es) in the Zaptec installation you have integrated with now retrieve power values from Enegic, which enables a safe and efficient power output.

In the overview in the app, you will now see that Zaptec Charge Control has been created:

From here you can control the charging boxes in the facility by activating **Adaptive charging**.



With Adaptive charging, you can set a personal schedule for the electric car charger (Simple schedule) or choose to automatically charge based on the best available electricity prices (optiCharge)

9**Get Zaptec ID manually**

Check in the user account, under Installation-> Settings-> Power management:

- that **SMART ECO MODE is disabled**.
- that **Manual Power Control is selected as power control**.

In the user account, under Installation-> Permissions, **press “Give permissions”:**

- **Add the account zapteccontrol@enegic.com with Owner and Service rights.**

In the Zaptec portal:

Navigate to Installation ->Settings->Details, press “Copy installation ID”. The ID should then be entered into the Enegic app when configuring the Reporter.



Svenska



Innan du sätter igång:



En Monitor ska vara installerad och konfigurerad för mätning av totalförbrukning.



Zaptec-laddboxen ska vara driftsatt och kopplad till en installation på ett användarkonto hos Zaptec.

Följ dessa steg för att integrera med Zaptec:


1



I Eneagic-appen, gå till **Inställningar, Licenser.**

Skanna QR-koden på den medföljande integrationslicensen.


2

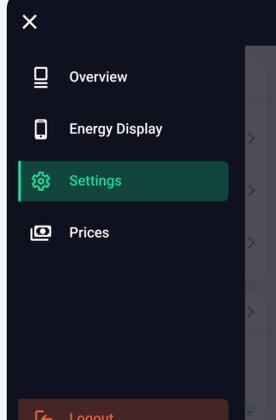

Gå till **Inställningar, Rapportörer** och **Lägg till ny rapportör**


Lägg till ny rapportör

3

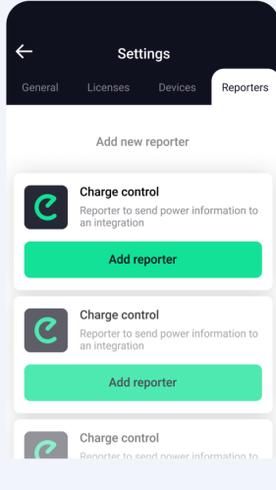

Välj **Zaptec** som typ av rapportör från listan.

4

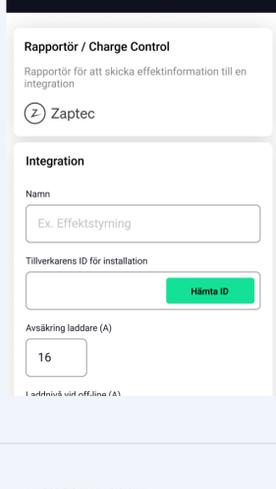


Sätt ett lämpligt namn.

Tryck på "Hämta ID" för att länka din Zaptec-installation till Rapportören.

Om du inte lyckas länka installationen, se punkt 9.


5

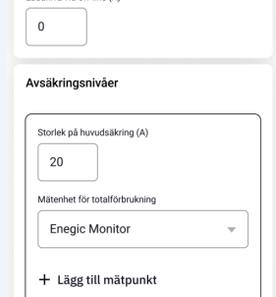

Ange avsäkring mot billaddaren.


Ange laddnivå i offline-mode, dvs en säker laddnivå om Eneagic Monitor inte kan leverera aktuell effektinformation.

6

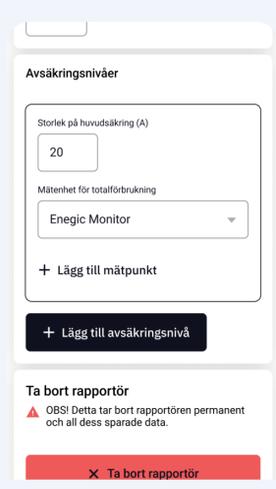

Ange huvudsäkringens storlek.

7

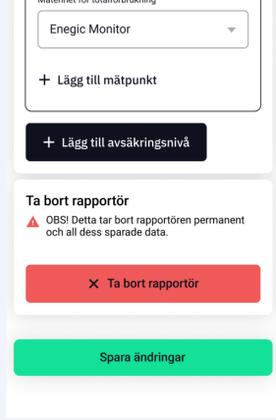


Kontrollera att rätt Eneagic Monitor-enhet är angiven som måtenhet för totalförbrukning.

Tryck på **Spara**.

Rapportören är nu konfigurerad.

8

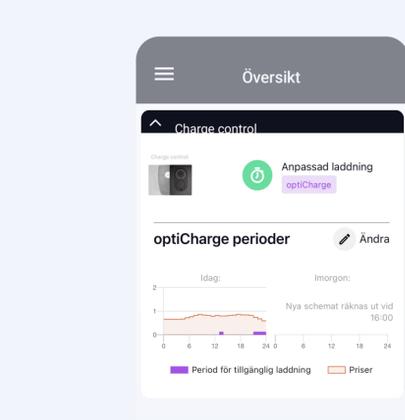

Nu är Eneagic Monitor integrerad med Zaptec

Laddboxen/laddboxarna i Zaptec-installationen du integrerat med hämtar nu effektvärden från Eneagic vilket möjliggör ett säkert och effektivt effektuttag.

I översikten i appen ser du nu att Zaptec Charge Control har skapats:

Via Zaptec Charge Control kan du styra laddboxarna i anläggningen genom att aktivera **Anpassad laddning**.



Med anpassad laddning kan du för elbilsladdaren ställa in ett personligt schema (Enkelt schema) eller välja att automatiskt ladda utifrån bästa tillgängliga elpriser (optiCharge)

9

Hämta Zaptec-ID manuellt

I Zaptec-portalen, gå till: Installation-> Settings-> Power Management och se till att:

- **SMART ECO MODE** är inaktiverat.

- **Manuell Power Control** är vald som effektkontroll.

I användarkontot, gå till: **Installation-> Permissions**, tryck på **"Give Permissions"**:

- **Lägg till kontot zaptecontrol@eneagic.com med Owner and Service rights.**

I Zaptec-portalen, gå till: Installation->Settings->Details,

tryck på **"Copy installation ID"**.

ID:t ska sedan klistras in i Eneagic-appen när du konfigurerar Rapportören.